


Modern Garden Trellis


Plans by The Handyman's Daughter

Copyright 2017


Rip 3 cedar fence pickets into $1\frac{1}{2}$ " wide strips

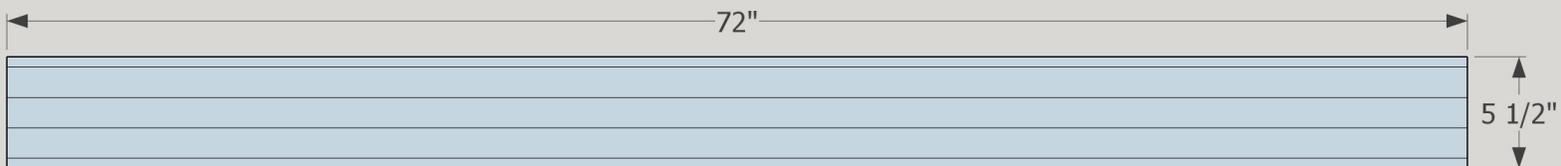


Cut list for $1\frac{1}{2}$ " wide strips:

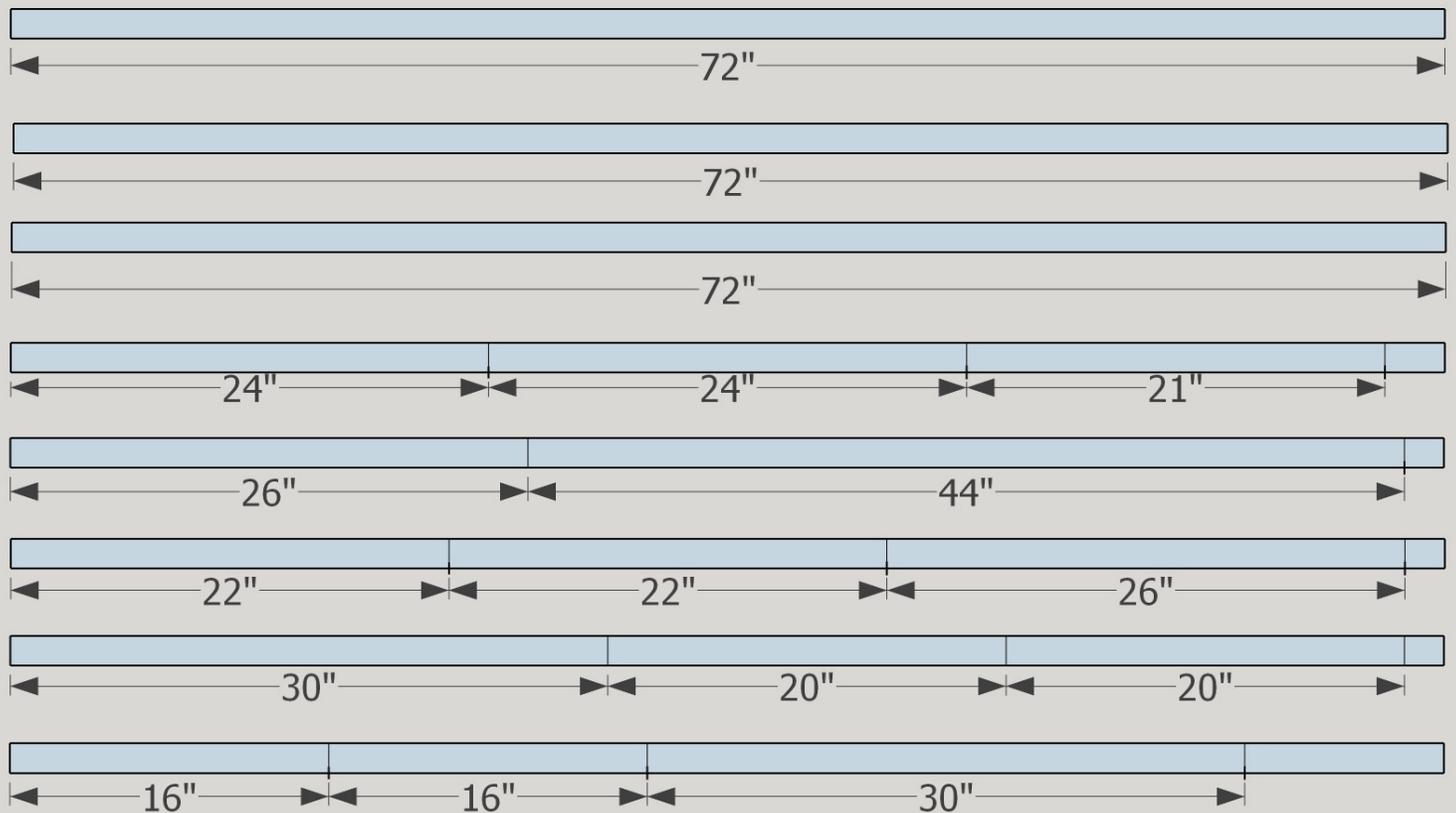

Assemble bottom of trellis as shown. Make sure middle vertical slat is square and centered on horizontal slat, and nail securely. Nail only once on side pieces to allow for pivoting.

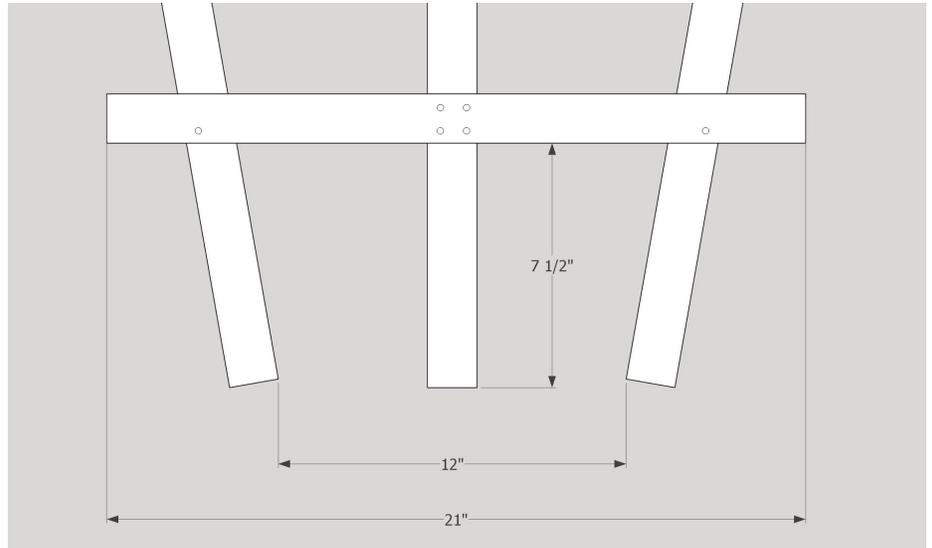

Assemble top of trellis as shown. Attach side pieces with nails first. Then square and center middle vertical slat. Remember to securely attach side slats at the bottom when top is complete.

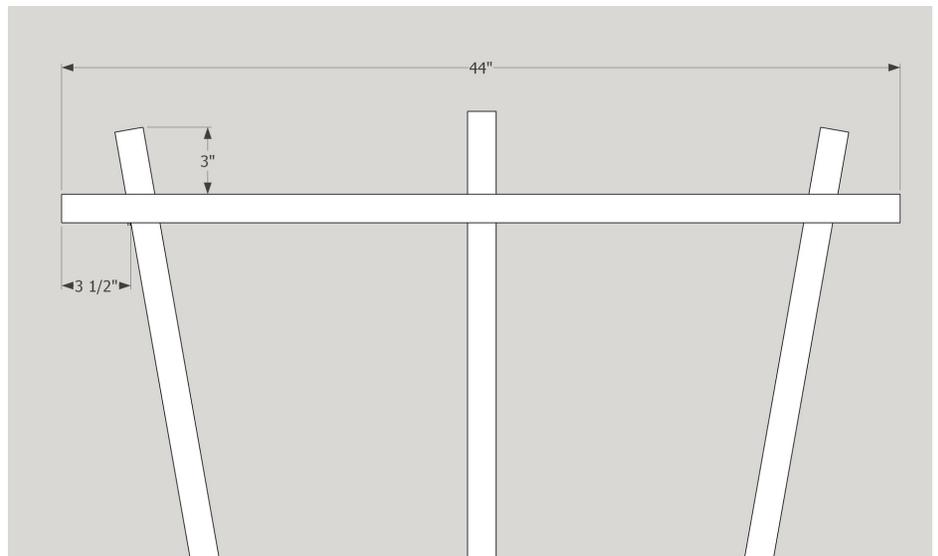

Starting from the bottom and working your way up, attach horizontal slats as shown. Slats are 3" apart vertically. Outside overlap is 3 1/2" (same as top slat). Use a 3" wide piece of scrap wood (about 2 feet long) as a spacer for quick assembly.

